


DECTRIS

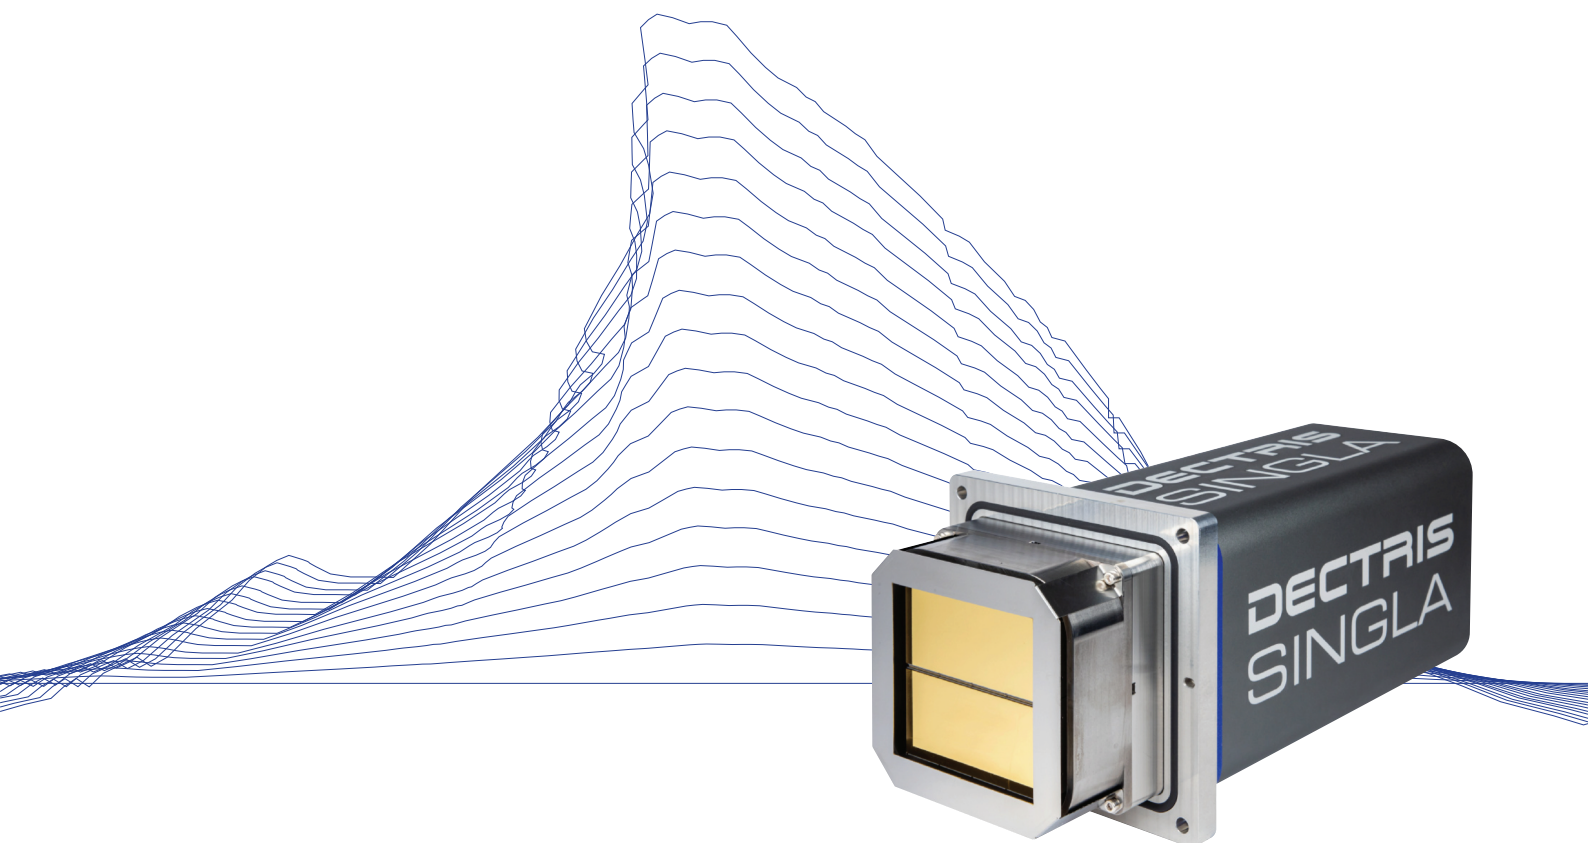

Technical Specifications

DECTRIS SINGLA®

DECTRIS Ltd.

5405 Baden-Daettwil
Switzerland
www.dectris.com

CONTENT

CONTENT	i
1 GENERAL INFORMATION	1
1.1 Contact and Support	1
1.2 Explanation of Symbols	1
1.2.1 Symbols in the Manual	1
1.2.2 Symbols on the Detector	1
1.3 Warranty Information	2
1.4 Disclaimer	2
2 USE OF THE DECTRIS SINGLA®	3
2.1 Product Return and Recycling	3
3 TECHNICAL SPECIFICATIONS	4
3.1 Specifications	4
3.1.1 Detector	4
3.2 Ratings	5
3.2.1 Detector	5
3.2.2 Power Supply Unit	5
3.2.3 Detector Control Unit	6
3.2.4 Thermal Stabilization Unit	6
3.3 Ambient Conditions	7
4 DETECTOR DIMENSIONS AND CONNECTORS	8
4.1 DECTRIS SINGLA® Detector	8
4.1.1 Technical Drawing	8
4.1.2 Front Side of the Detector	9
4.1.3 Connector Side of the Detector	9
4.1.4 Status LEDs	10
4.1.5 Connectors and Connecting Cables/Pipes	10
4.2 Detector Control Unit	11
4.2.1 Configuration	11
4.2.2 Connectors	12
4.3 Thermal Stabilization Unit	13
5 INSTALLING THE DETECTOR SYSTEM	15
5.1 Transport Considerations	15
5.2 Mounting	15
5.3 Grounding of the Detector	15
5.4 Fiber Optic Cable Installation	16
5.4.1 Installing the Cables	16
5.4.2 Checking the Connection	16
5.4.3 Cleaning the Connectors	16
5.5 Connection to Thermal Stabilization Unit	16
5.6 Mounting the Detector Control Unit	18
6 OPERATION PROCEDURE	19
6.1 Operation at a Transmission Electron Microscope	19
6.1.1 Ambient Conditions for In-Vacuum Use	19
6.1.2 Getting Started	19
6.2 Turning Off the Detector	20
6.3 Storing the Detector	21
6.4 Cleaning and Maintenance	21
7 TROUBLESHOOTING	22

1. GENERAL INFORMATION

1.1. Contact and Support

Address:	DECTRIS Ltd. Taefernweg 1 5405 Baden-Daettwil Switzerland	DECTRIS USA Inc. 1500 Walnut Street, Suite 1630 Philadelphia, PA 19102 USA	DECTRIS Japan K.K. Nakagawa Building 801 3-37 Higashi-Nobusue, Himeji-shi Hyogo 670-0965, Japan
Phone:	+41 56 500 21 02	+1 267 924 5179	+81 79 280 9585
Website:	www.dectris.com		
Email:	support@dectris.com		

Should you have questions concerning the system or its use, please contact us via telephone, e-mail or fax.

1.2. Explanation of Symbols

1.2.1. Symbols in the Manual

Danger

#0



Danger blocks are used to indicate immediate danger or risk to personnel or equipment.

Warning

#0



Warning blocks are used to indicate danger or risk to personnel or equipment.

Caution

#0



Caution blocks are used to indicate danger or risk to equipment.

Information

#0



Information blocks are used to highlight important information.

1.2.2. Symbols on the Detector

Attention

#0



Before operating the detector, please consult the user documentation.

Danger

#0



Touching the cover foil or sensors can cause an electrical shock. Disconnect power before servicing the detector!

1.3. Warranty Information

Caution

#1



Do not ship the system back before you receive the necessary transport and shipping information.

1.4. Disclaimer

DECTRIS® has carefully compiled the contents of this manual according to the current state of knowledge. Damage and warranty claims arising from missing or incorrect data are excluded.

DECTRIS® bears no responsibility or liability for damage of any kind, also for indirect or consequential damage resulting from the use of this system.

DECTRIS® is the sole owner of all user rights related to the contents of the manual (in particular information, images or materials), unless otherwise indicated. Without the written permission of DECTRIS® it is prohibited to integrate the protected contents in this publication into other programs or other websites or to use them by any other means.

DECTRIS® reserves the right, at its own discretion and without liability or prior notice, to modify and/or discontinue this publication in whole or in part at any time, and is not obliged to update the contents of the manual.

2. USE OF THE DECTRIS SINGLA®

The DECTRIS SINGLA® detector system has been designed for the detection of electrons. It is intended for indoor use only. For other applications, please contact DECTRIS® technical support for additional information.

Caution

#2



Improper use of the DECTRIS® detector system can compromise its safety and its functionality is no longer guaranteed.

Caution

#3



When operating the detector system on a Transmission Electron Microscope strictly follow the instructions given in this document.

2.1. Product Return and Recycling

We recycle DECTRIS® detector systems that are no longer suitable for use. If you are not using your DECTRIS® detector system any more, send it back to us. We will make sure that your system is responsibly and safely recycled. This service is free for customers who purchased a new DECTRIS® detector system.

3. TECHNICAL SPECIFICATIONS

3.1. Specifications

3.1.1. Detector

Table 3.1: Technical Specifications

Sensor	Reverse-biased silicon diode array
Sensor material	Silicon (Si)
Pixel size (W x H)	75 μm x 75 μm = 5625 μm^2
Module size (W x H)	77.1 mm x 38.4 mm = 2961 mm ²
Pixel array format (W x H)	1028 pixel x 1062 pixel = 1 091 736 pixel
Active area (W x H)	77.1 mm x 79.65 mm = 6141.02 mm ²
Intermodule gap	hor. - pixel, vert. 38 pixel
Image bit depth	8 bit, 16 bit, 32 bit
Readout bit depth	8 bit, 16 bit
Maximum count rate	1×10^7 electrons/pixel/s
Adjustable threshold range	3.5 keV to 30 keV
Electron energy range	30 keV to 200 keV
Number of thresholds	1
Readout time	continuous readout, with 100 ns dead time
Maximum frame rate	2250 Hz, 16 bit 4500 Hz, 8 bit
Connection to control unit	4 x LC/UPC duplex connectors
Power supply	External power supply unit
Software interface	HTTP REST interface (via network connection)
Dimensions (W x H x D)	145 mm x 145 mm x 323 mm
Weight	11 kg (w/o flange)
Overvoltage category	II
Means of protection	I (power supply)
Pollution degree	II
Maximum operating altitude	2000 m a.s.l.

3.2. Ratings

3.2.1. Detector

Table 3.2: Power Ratings

Detector power input	+12 V DC, 85 W
Detector external trigger input	High level: 2.1 – 5.0 V Low level: 0.0 – 0.8 V
Warning #1  Absolute maximum is 5 V. Applying a higher voltage will damage the detector.	
External trigger input impedance	47 kΩ
Detector trigger output	High level: 2.3 V to 3.3 V Low level: 0.0 V to 0.6 V Max. current: 24 mA

3.2.2. Power Supply Unit

Caution #4  Only use the power supply delivered with the DECTRIS SINGLA®.	
--	--

Table 3.3: Power Supply Unit Ratings

Power supply unit power	Input 85 VAC to 264 VAC 47 Hz to 63 Hz 1 A to 1.85 A Output 12 VDC max. 11.5 A 138 W
AC connector	IEC-320-C14 input inlet
Case dimensions (W x H x D)	72 mm x 35 mm x 175 mm
Weight	0.7 kg

3.2.3. Detector Control Unit

Information

#1



Please consult the user documentation of the DELL PowerEdge R7615 for details.

Table 3.4: Detector Control Unit Ratings

Detector control unit power input	2 x 100 V to 240 V AC, 50/60 Hz, 5 A to 10 A, 1400 W (Platinum) 1+1 redundant, hot swappable power supply unit
Dimensions (W x H x D)	482.4 mm x 86.8 mm x 758.29 mm
Weight	20 kg
Chassis	2U

3.2.4. Thermal Stabilization Unit

The DECTRIS SINGLA® detector is optionally equipped with one of the two Thermal Stabilization Units given in 3.5.

Information

#2



Please consult the user documentation of the thermal stabilization unit for details.

Caution

#5



DECTRIS SINGLA® was verified with the chillers provided in 3.5. Using alternative chillers may result in a deterioration of performance.

Table 3.5: Thermal Stabilization Unit Options

Thermal stabilization unit	SMC HEC 002-A5B Closed circuit air-water thermal stabilization unit
Thermal stabilization unit	SMC HEC 003-W5B Closed circuit water-water thermal stabilization unit

Table 3.6: Thermal Stabilization Unit Ratings

	SMC HEC 002-A5B	SMC HEC 003-W5B
Power input	Single phase 100 VAC to 240 VAC, allowable voltage range $\pm 10\%$, 50/60 Hz	
Current consumption	8 A (100 VAC) to 3 A (240 VAC)	5.5 A (100 VAC) to 2.5 A (240 VAC)
Dimensions (W x H x D)	270 mm x 393 mm x 436 mm	246 mm x 390 mm x 482 mm
Weight	17.5 kg	12 kg

Table 3.6: Thermal Stabilization Unit Ratings - continued

	SMC HEC 002-A5B	SMC HEC 003-W5B
Typical flow	1 L min ⁻¹	1 L min ⁻¹
Maximum operation pressure	3 bar	3 bar
Piping port	Rc 1/4	Rc 3/4

DECTRIS SINGLA® requires a minimum flow rate of 1 L min⁻¹.

3.3. Ambient Conditions

Table 3.7: Detector Operating Ambient Conditions

Ambient Condition	Value
Operating temperature	+20 °C to +35 °C
Operating humidity	<80 % at 20 °C, non-condensing
Storage temperature	+15 °C to +40 °C
Storage humidity	<40 % at 20 °C, non-condensing

Caution

#6



Please consider the following points when storing the detector

- Make sure the temperature and the humidity inside the transport box does not exceed the specified range (use of a drying agent is required).
- Ensure that no condensation moisture develops if the detector is stored at low temperature.

4.1.2. Front Side of the Detector

Danger

#1



Danger of electric shock. The sensor is operated at high voltages. Do not touch the sensor. Touching the sensor can cause an electrical shock.

The detector comes with a protection cover. It protects the sensor from dust and being touched when not mounted to a microscope.

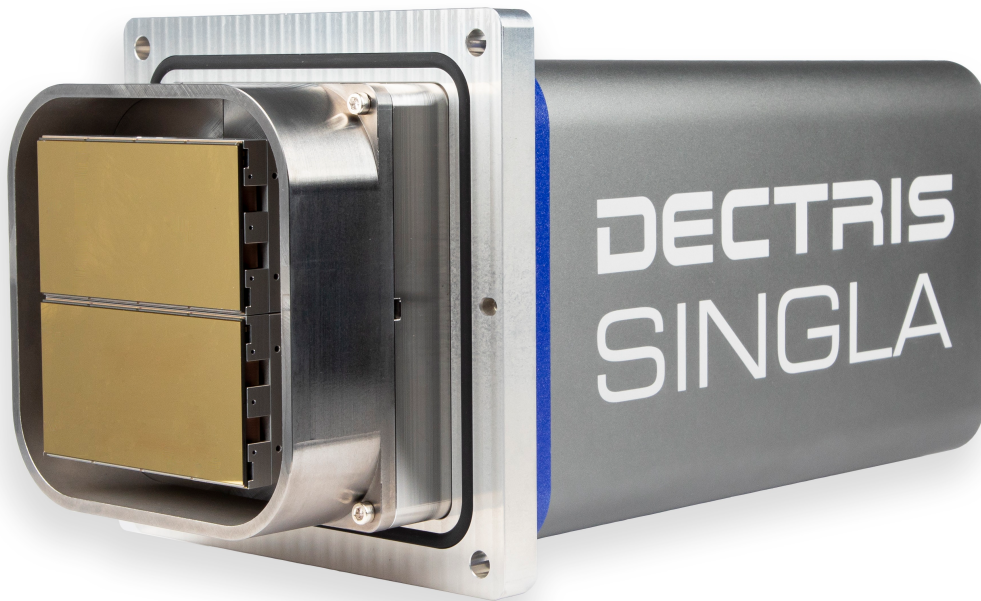


Figure 4.2: The DECTRIS SINGLA® Detector with the Cover Removed (front view)

4.1.3. Connector Side of the Detector

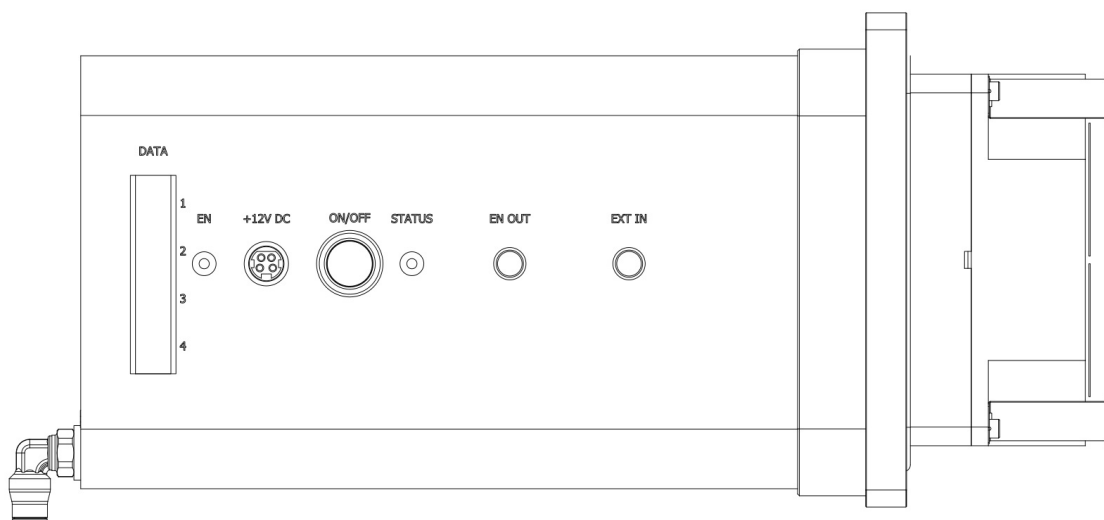


Figure 4.3: The DECTRIS SINGLA® Detector (side view)

4.1.4. Status LEDs

Table 4.1: The Meaning of the Status LEDs on the Detector

LED	Behavior	Description
EN	Orange	Indicates the detector is acquiring.
STATUS	Green steady	Detector running and hardware OK.
	Green blinking	Detector hardware OK, detector in Standby or Startup mode. ⇒ Press power button to turn on the detector.
	Red blinking and Detector in error state	Detector may be overheating ⇒ Check cooling system
	Off	Detector has no power ⇒ Check the power adapter and mains connection.

4.1.5. Connectors and Connecting Cables/Pipes

Table 4.2: Electric Connectors and Connecting Cables

Connector	Description
DATA	4 x LC/UPC duplex connectors DATA 1 → det1 DATA 2 → det2 DATA 3 → det3 DATA 4 → det4 Use Single Mode fiber optic patch cable with LC/UPC duplex connectors at both ends. We recommend to use the optic patch cables that are supplied with the detector system. Detector and detector control unit are equipped with 10GBASE-LR Single Mode SFP+ optical transceivers. Do not replace the optical receivers, as proper function of the detector system cannot be guaranteed otherwise. Please contact support@dectris.com if you need replacement transceivers. Caution #7 There must be a 4 x LC/UPC duplex point-to-point connection between detector and detector control unit.
POWER	DC power connector (see tables 3.2 and 3.3)
EXT IN	External trigger input (see table 3.2) Use a Lemo® Type 00 (NIM/CAMAC) cable.
EN OUT	Enable out, high when counting is enabled. Use a Lemo® Type 00 (NIM/CAMAC) cable.

Table 4.2: Electric Connectors and Connecting Cables - continued

Connector	Description
	Functional ground
Information#4 The detector can be grounded additionally via the functional ground connector at the side to establish a defined grounding.	
COOLANT IN/OUT	Inlet and outlet for water coolant, 6 mm push-in fittings

4.2. Detector Control Unit

4.2.1. Configuration

Caution#8



Do not access or modify the operating system of the detector control unit.

The user interface of the detector control unit is accessible using a web browser. The detector control unit does not need any connections other than the power and network cables.

The detector control unit has to be connected point-to-point to the detector via 4 x LC/UPC duplex connectors. The detector control unit can be integrated into the site network infrastructure using one of the interfaces described in table 4.3. The detector control unit is optimized for performance and stability of operation. In order to achieve these goals we deliver the detector control unit with fixed firmware (BIOS etc.) and software (OS) version. The detector control unit must not be operated in an environment where unauthorized access is possible. The detector control unit does not provide authentication mechanisms and is not protected against malicious acts by unauthorized third parties.

Using the Web User Interface, it is possible to restart the SINGLA control service, trigger an update, and to shut down and to reboot the detector control unit. All further control of the detector is carried out via the SIMPLON API (see separate documentation).



Figure 4.4: Front view of the detector control unit (not in actual configuration).

Caution

#9



Pushing the power button on the front panel longer than 2 seconds will immediately halt the detector control unit. All image data on the detector control unit will be permanently lost.

Information

#5



Briefly pushing the power button on the front panel will shut down the detector control unit. May take up to 1 min. Keep in mind that this action will NOT power down the detector.

Warning

#2



When powering off the DCU, the detector stays initialized. Therefore, a pump/vent action can still cause a high voltage discharge and damage the sensor.

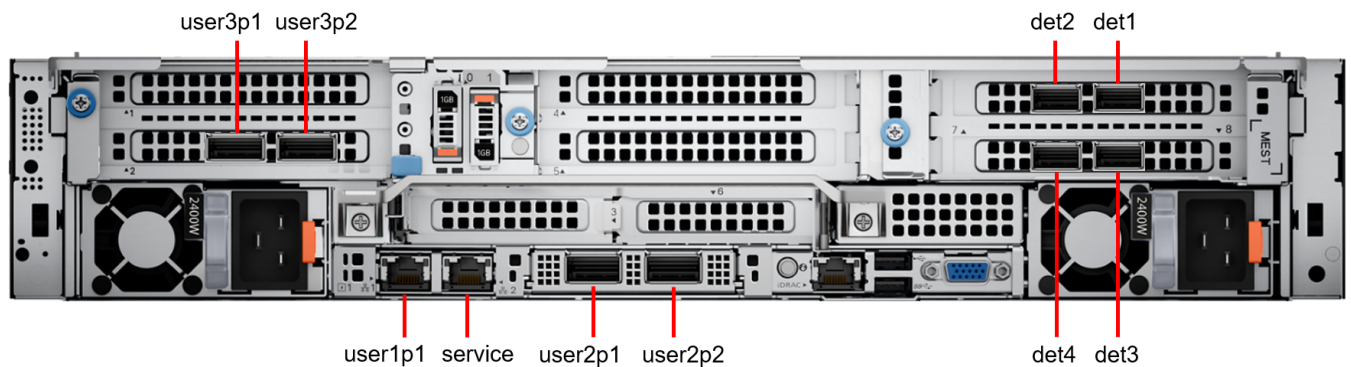


Figure 4.5: Back view of detector control unit with labeled network interfaces.

4.2.2. Connectors

Table 4.3: Detector Control Unit Connectors

Connector	Description
user1p1 (Integrated NIC)	Interface name: user1p1 (1 GBase-T) User configurable GbE network interface Preconfiguration: DHCP
service (Integrated NIC)	Interface name: service (1 GBase-T) Fallback GbE network interface Preconfiguration: Static 169.254.254.1 (Netmask 255.255.255.0)
user2p1 (Integrated NIC)	Interface name: user2p1 (10 GbE SFP+) User configurable 10 GbE network interface Preconfiguration: DHCP
user2p2 (Integrated NIC)	Interface name: user2p2 (10 GbE SFP+) User configurable 10 GbE network interface Preconfiguration: DHCP
user3p1 (Slot 2)	Interface name: user3p1 User configurable 100 Gb QSFP28 network interface

Table 4.3: Detector Control Unit Connectors - continued

Connector	Description
user3p2 (Slot 2)	Interface name: user3p2 User configurable 100 Gb QSFP28 network interface
Data	Detector interface ports DATA 1 → det1 DATA 2 → det2 DATA 3 → det3 DATA 4 → det4
2 x Power	AC Connector (redundant power supply)

See DELL owner's manual for further details.

4.3. Thermal Stabilization Unit

A thermal stabilization unit is required for the operation of the DECTRAIS SINGLA® detector system. A list of compatible thermal stabilization units is given in 3.5.

The detector comes with an adapter that provides self-sealing valves. The adapter is required to connect the detector to one of the optionally available thermal stabilization units.

The tubing should be kept as short as possible to ensure the best flow.

Table 4.4: Operating Conditions

Condition	Definition
Operating temperature	The thermal stabilization unit has to be set to a temperature of 20 °C for normal operation.
Maximum operating pressure	3 bar
Coolant	Use ~2/3 distilled water and ~1/3 ethylene glycol with 2–5% corrosion inhibitor (free of borates, phosphates, nitrites, amines and silicates).
Danger #2 Ethylene glycol can be seriously harmful to your health or fatal if handled incorrectly. Consider the packaging and safety instructions provided by your local supplier.	
Information #6 Before operating the thermal stabilization unit, please read the User Manual of the thermal stabilization unit.	

Caution

#10



When connecting or disconnecting the cooling hoses, turn off the detector and the thermal stabilization unit.

Caution

#11



When operating the detector, the thermal stabilization unit must always be turned on and the pump has to be activated (see user documentation of thermal stabilization unit).

Caution

#12



Use opaque hoses to avoid the growth of algae.

Caution

#13



Do not set the temperature of the thermal stabilization unit below the recommended operating temperature. Condensing moisture can develop and damage the detector.

5. INSTALLING THE DETECTOR SYSTEM

5.1. Transport Considerations

Warning

#3



Avoid vibration and shock when moving the detector.

The detector has been delivered in a robust transport box. Please keep this transport box for transport or storage purpose.

5.2. Mounting

The detector should be mounted to the Transmission Electron Microscope by qualified personnel only. Please contact support@dectris.com for support.

Caution

#14



Make sure the transport cover is attached with the provided screws when the detector is not in use.

Danger

#3



Make sure that the power is disconnected before mounting / unmounting the detector to / from the microscope or attaching / removing the protection cover.

Caution

#15



Make sure to use silver-plated screws when mounting the detector to a camera box.

5.3. Grounding of the Detector

Caution

#16



Connect the main plug of the external power supply unit to a properly grounded power outlet. It is recommended to use the microscope's grounding.

The detector can be grounded additionally via the functional ground connector.

5.4. Fiber Optic Cable Installation

The connection between the detector head and the detector control unit uses fiber optic cables in order to provide best connectivity during operation. However, special care has to be taken when installing the fiber optic cables. Fiber optic cables are sensitive to dirt on the connectors and excessive bending, squeezing, or pinching of the cables.

The DECTRIS SINGLA® is delivered with a 30 m long optical fiber cable. The connection to the detector consists of 4 x LC/UPC duplex connectors.

5.4.1. Installing the Cables

The fiber optic cables come with a pulling eye to make cable installation easier and a cable sock to protect the connectors. Use the pulling eye to pull the cable until its destination. Once the cable is properly installed, the cable sock can be removed.

The minimal bending radii are $10 \times$ diameter for static and $20 \times$ diameter for dynamic bends. The diameter of the fiber trunk is ca. 5 mm while the diameter of the 0.5 m long fiber breakout at both ends of the cables is ca. 3 mm. We therefore recommend avoiding both static and dynamic bending radii smaller than 10 cm – make sure not to exceed this bending radius during the course of the fiber cable installation. Use cable trays or similar to guide the cables and protect them. Stepping on the cables can damage the cables. Also make sure that there is no tension on the connectors.

5.4.2. Checking the Connection

The SINGLA web interface offers a way to assess the quality of the connection between the detector control unit and the detector head. The User Manual explains how to access the web interface.

In order for the cable check to work properly, the detector has to be initialized first. The cable check shows the active connections and the transceiver Rx and Tx power. Rx values below 0.25 mW point towards a problem in the connection. Dirty connectors are the most likely reason for bad connections. Follow the instructions in section 5.4.3 in case of any issues with the connection.

5.4.3. Cleaning the Connectors

Dirty fiber connectors are the most common reason for bad connections. Any dirt or dust particle on the connector can lead to poor signal and may also lead to permanent fiber and/or connector damaged when plugged. We recommend to always clean the fiber optic connectors before connecting them. Make sure to clean both the connector and the transceiver modules, as both can be dirty.

It is recommended to first use dry cleaning technique like a fiber optic cable cleaning pen. These pens are easy to use for both the connectors and the transceivers. Fiber optic inspection microscopes can help assess if the optical fiber connectors are clean. If dry cleaning did not help, wet cleaning can be used. However, make sure to use wet cleaning kits designed specifically for fiber optic connectors and follow the manufacturers instructions.

Always cover the connectors and transceivers when they're unplugged. The cables and transceivers all come with covers which can be used for this purpose.

5.5. Connection to Thermal Stabilization Unit

A thermal stabilization unit is required for the operation of the DECTRIS SINGLA® detector system. A list of compatible thermal stabilization units is given in 3.5.

The detector comes with an adapter that provides self-sealing valves. The adapter is required to connect the detector to one of the optionally available thermal stabilization units.

The tubing should be kept as short as possible to ensure the best flow.

Table 5.1: Operating Conditions

Condition	Definition
Operating temperature	The thermal stabilization unit has to be set to a temperature of 20 °C for normal operation.
Maximum operating pressure	3 bar
Coolant	Use ~2/3 distilled water and ~1/3 ethylene glycol with 2–5% corrosion inhibitor (free of borates, phosphates, nitrites, amines and silicates). Danger #4  Ethylene glycol can be seriously harmful to your health or fatal if handled incorrectly. Consider the packaging and safety instructions provided by your local supplier.
Information #7  Before operating the thermal stabilization unit, please read the User Manual of the thermal stabilization unit.	
Caution #17  When connecting or disconnecting the cooling hoses, turn off the detector and the thermal stabilization unit.	
Caution #18  When operating the detector, the thermal stabilization unit must always be turned on and the pump has to be activated (see user documentation of thermal stabilization unit).	
Caution #19  Use opaque hoses to avoid the growth of algae.	
Caution #20  Do not set the temperature of the thermal stabilization unit below the recommended operating temperature. Condensing moisture can develop and damage the detector.	

5.6. Mounting the Detector Control Unit

Caution

#21



Make sure that the detector control unit has adequate ventilation.

The detector control unit can be mounted in a standard 19 inch rack, which has to be properly grounded.

6. OPERATION PROCEDURE

 
6.1. Operation at a Transmission Electron Microscope

Before operating the detector, make sure you have read the Technical Specifications and the User Manual. The typical reachable vacuum for the detector head is 10^{-6} mbar. The outgassing rate and content are not specified.

6.1.1. Ambient Conditions for In-Vacuum Use

For operation of the detector the following conditions must be fulfilled:

Table 6.1: In-Vacuum Operating Conditions

Operation Condition	Definition
Pressure during operation	above 200 mbar or less than 10^{-3} mbar  10^5 Pa 10^{-1} Pa
Detector mounting plate temperature during operation	16 °C to 25 °C
Thermal stabilization unit set temperature	20 °C
Chamber temperature during "bake-out" (detector powered off)	max. +60 °C (for temperatures > 40 °C make sure the thermal stabilization unit is set to +40 °C and running)

6.1.2. Getting Started

Make sure the vacuum conditions in table 6.1 are met and follow below procedures for venting and pumping down the detector chamber of the Transmission Electron Microscope.

Warning

#4



Prior to pumping down and venting:
Always make sure the detector has NO POWER and is WARMED UP to room temperature. Otherwise it could be damaged through electrical discharge or condensation.

Caution

#22



Make sure that the detector is connected to the central power line of the microscope.

Detector Installation

- Ensure that the detector is installed at the Transmission Electron Microscope by qualified personnel.
- Make sure the detector is POWERED OFF by disconnecting the power supply.
- Pump down the detector chamber.
- Once the pressure inside the vacuum chamber is below 10^{-3} mbar set the temperature on the thermal stabilization unit to 20 °C and turn on the thermal stabilization unit (pumping down a warm detector prevents condensation issues).

Startup Procedure

- Make sure the thermal stabilization unit has reached the set value and the pressure inside the vacuum chamber is sufficiently low to meet the operating conditions
- Power up the detector by connecting the power supply and pressing in the standby button  on the detector
- Turn on the detector control unit. Wait at least 5 min before trying to connect.

The detector is now ready to use.

Information

#8



The software start-up procedure is described in detail in the User Manual.

Venting the Detector Chamber

- Turn OFF the power to the detector by disconnecting the power supply.
- Make sure the system is warmed up to 20 °C
- Use dry air or nitrogen to vent the detector chamber.

6.2. Turning Off the Detector

To turn off the detector:

- Push the standby button  to release it and return the detector to the standby state.
- The detector power cable can now be disconnected if needed.
- Turn OFF the detector control unit.

Warning

#5



As long as the detector power cable is connected, the detector has to be considered under power.

6.3. Storing the Detector

Please follow these instructions:

- Put the detector in a plastic bag, add at least 200 g of drying agent (i.e. silica gel) into the bag and seal it air-tight.
- Check the humidity and change the drying agent frequently for compliance with the storage requirements in section 3.3.

6.4. Cleaning and Maintenance

Caution

#23



The sensor must not be touched or cleaned. If it is damaged, please contact DECTRIS® technical support.

The housing can be cleaned with a soft tissue.

The DECTRIS SINGLA® detector does not require any maintenance. It is recommended to change the coolant in the cooling loop annually for longevity.

Please refer to the user documentation of the thermal stabilization unit for detailed information about the maintenance of your thermal stabilization unit.

7. TROUBLESHOOTING

table 7.1 provides an overview of possible problems with the detector system and instructions in order to solve the problems. If the problem you are experiencing is not listed below or if the instructions do not help, please contact support@dectris.com.

The LEDs at the side of the detector can provide valuable information for troubleshooting. Check section 4.1.4 for further informations.

Table 7.1: Troubleshooting

Problem	Cause	Solution
Detector control unit does not start properly.	Detector control unit is not powered.	Check the User Documentation of the detector control unit (see section 3.2.3).
Communication error, the detector is not found at startup.	Data cable is not connected or defective.	Check the connection between detector control unit and detector. Make sure that there is a direct, peer-to-peer connection between the detector control unit and the detector. Avoid tangling or strong bending of the data cable. Check the status of the LINK LED. If the detector control unit and the detector are powered and correctly connected, the LINK LED should be green (Takes up to 30 s after power up).
Detector shuts down and cannot be initialized.	Temperature error.	Check that the detector is properly supplied with coolant and check the temperature of the coolant at the front panel of the thermal stabilization unit. Wait until the detector cools down. Initialize the detector again.
The detector fails to turn on.	The power cord is not connected or the plug is not completely inserted.	Connect the power cord firmly. Check the LED on the external power supply.
Image acquisition not possible.	Detector is not properly initialized.	Initialise the detector via the SIMPLON API. (See API Reference)
Detector housing is humid.	Ambient humidity around the detector exceeds the operating conditions.	Shut down the detector immediately and check the humidity. Power up the detector only when the ambient humidity has been reduced.

8. CREATE SUPPORT REQUEST

If you have any specific questions, you can request technical support using the contact information provided in Chapter section 1.1, or by sending an email to support@dectris.com.

DCU logs often play a crucial role in resolving technical issues, as they contain valuable information for debugging and identifying system misbehavior. Therefore, it is highly recommended to provide these logs when contacting our support team.

The following step-by-step instructions guide users through the process of creating a tarball of the current log files on the DCU:

- Open the SINGLA web interface
- Navigate to Technical Support
- Access the Create a bug report menu and click on CREATE BUG REPORT
- Enter a title, description, and an appropriate log time window (Logs age [hours]), then click SAVE
- Click on the download symbol for the newly created report to download the generated log report
- Send the log report as Email attachment to the DECTRIS support team

Information

#9



The bug report is not sent automatically.

Information

#10



The log report only contains logs for the given Logs age.

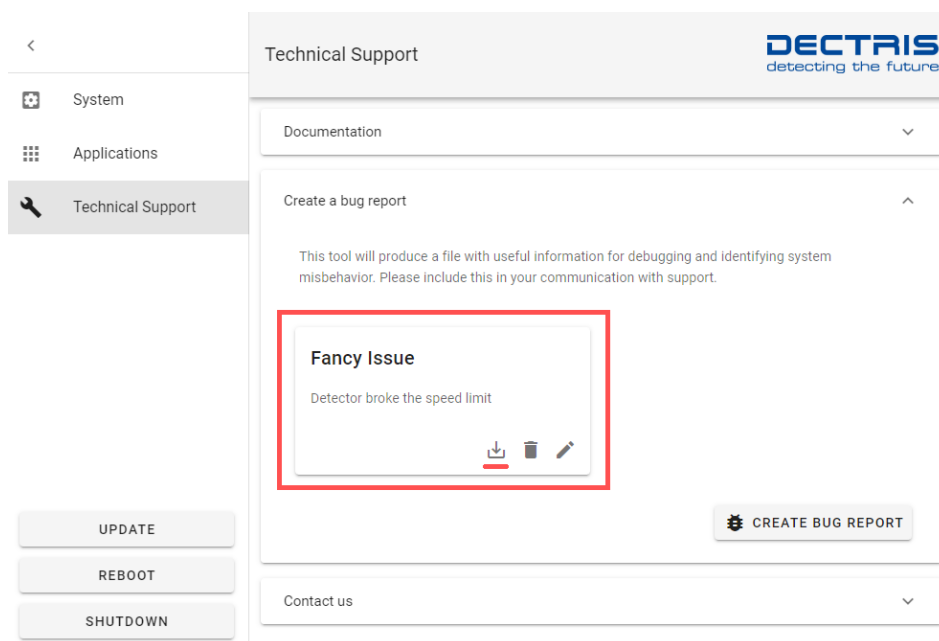


Figure 8.1: Created bug report ready for download

TRADEMARKS AND PATENTS

Trademarks

Registered trademarks®:

"DECTRAIS": AU, AUS, CH, CN, DE, FR, IT, JP, KR, USA, UK

"DETECTING THE FUTURE": AUS, CH, CN, EU, JP, KR, USA, UK

"DECTRAIS INSTANT RETRIGGER": AUS, CH, CN, EU, JP, KR, UK, USA

"Lines-ROI": CH, EU, JP

"DECTRAIS ELA": AUS, CH, CN, EU, JP, KR, UK, USA

"DECTRAIS QUADRO": AUS, CH, CN, EU, JP, KR, USA, UK

"DECTRAIS ARINA": AUS, CH, CN, EU, JP, KR, USA, UK

"DECTRAIS SINGLA": AUS, CH, CN, EU, JP, KR, USA, UK

"DECTRAIS CRISTALLINA": AUS, CH, CN, EU, JP, KR, USA, UK

"NOVENA": CH, EU, AUS, CN, JP, USA, UK, KR

© 9/ 2025 DECTRAIS Ltd., all rights reserved • Subject to technical modifications.